

Installing USB Link Software

060219, Installing USB link software 2019


The newest version of the USB Link Software is downloadable from the OxyGuard International A/S website or by pressing [here](#).

Both the USB Link Drivers and the USB Link Software Version 2 need to be downloaded (place the downloaded files on the desktop; they can be deleted after installation).

Installing Drivers

- First remove any attached USB Links.
- Double-click the USB Link Drivers file (if your antivirus software complains about it, allow the file to pass).
- When asked to install, do so.
- A message box will appear asking if you are “willing to allow an unknown publisher to make change to your machine”. This file name will appear as “CP210xVCP Installer.exe “. Please allow this.
- When asked to install, do so.
- After installation, insert the USB Link into the PC; wait a few minutes while Windows locates the drivers.

The installation can be verified by the [Device Manager](#) (Windows will warn you about virus when you use this link; you can search for the file (devmgmt.msc) and run it yourself). If the USB Link is working correctly the “Polaris 2 –USB Link” line is shown under “Porte (COM and LPT)” as displayed in the image below:

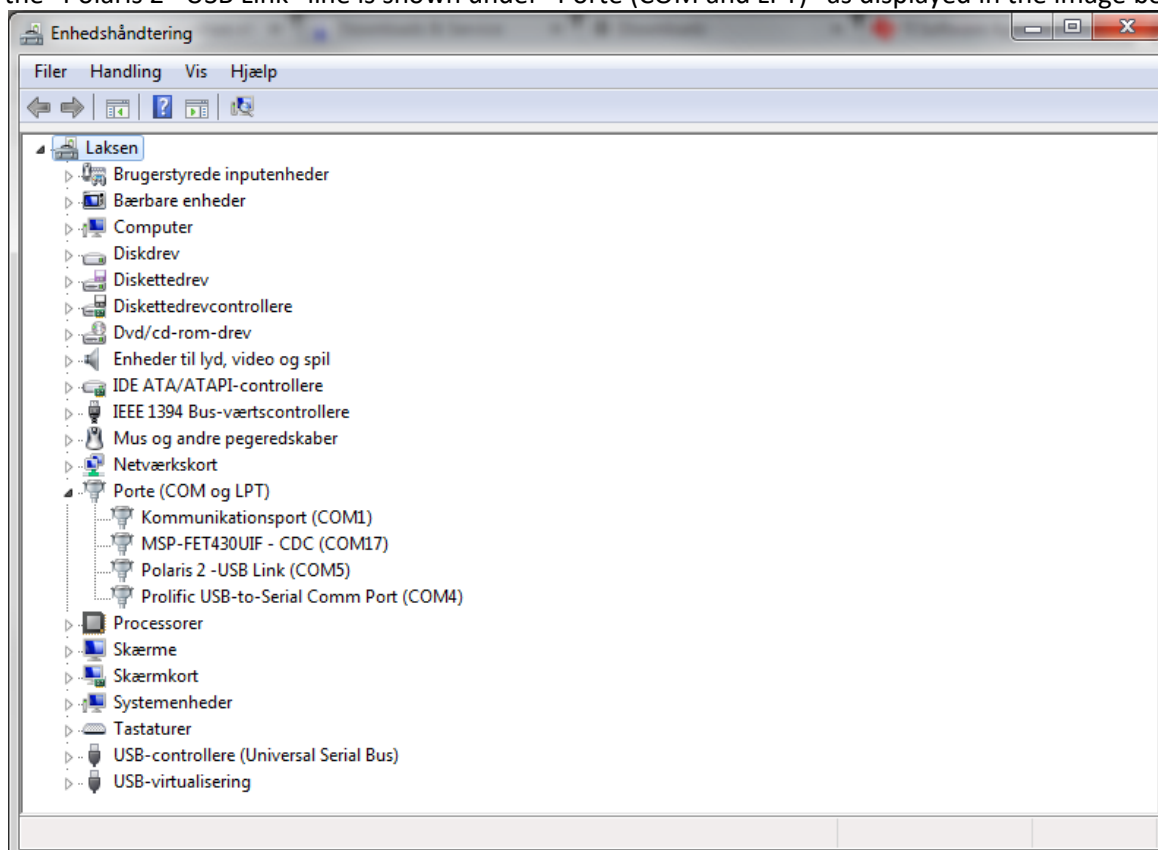

Installing USB Link Software


060219, Installing USB link software 2019

Installing Software

- Unzip the downloaded USB Link V2 file to the desktop.
- Double-click the USB Link V2.exe file.
- When asked to install, do so.
- A license from .NET is displayed; accept this.
- A .NET client Version 3.5 will ask to be installed, please do so.
- When asked to install the USB Link, do so.


When the load bar has reached the end, the USB Link Software will start up. An “OxyGuard International” folder is placed in the start menu under “All Programs”

The First Time You Run the Software

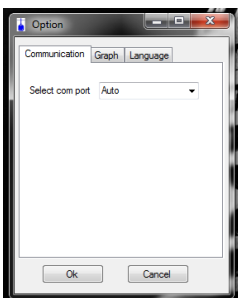

After installation the software will start up displaying the options menu as in the image. Press Ok to except the default setting.

The default view will be displayed and if the USB Link is attached, the software should look as in the following image:

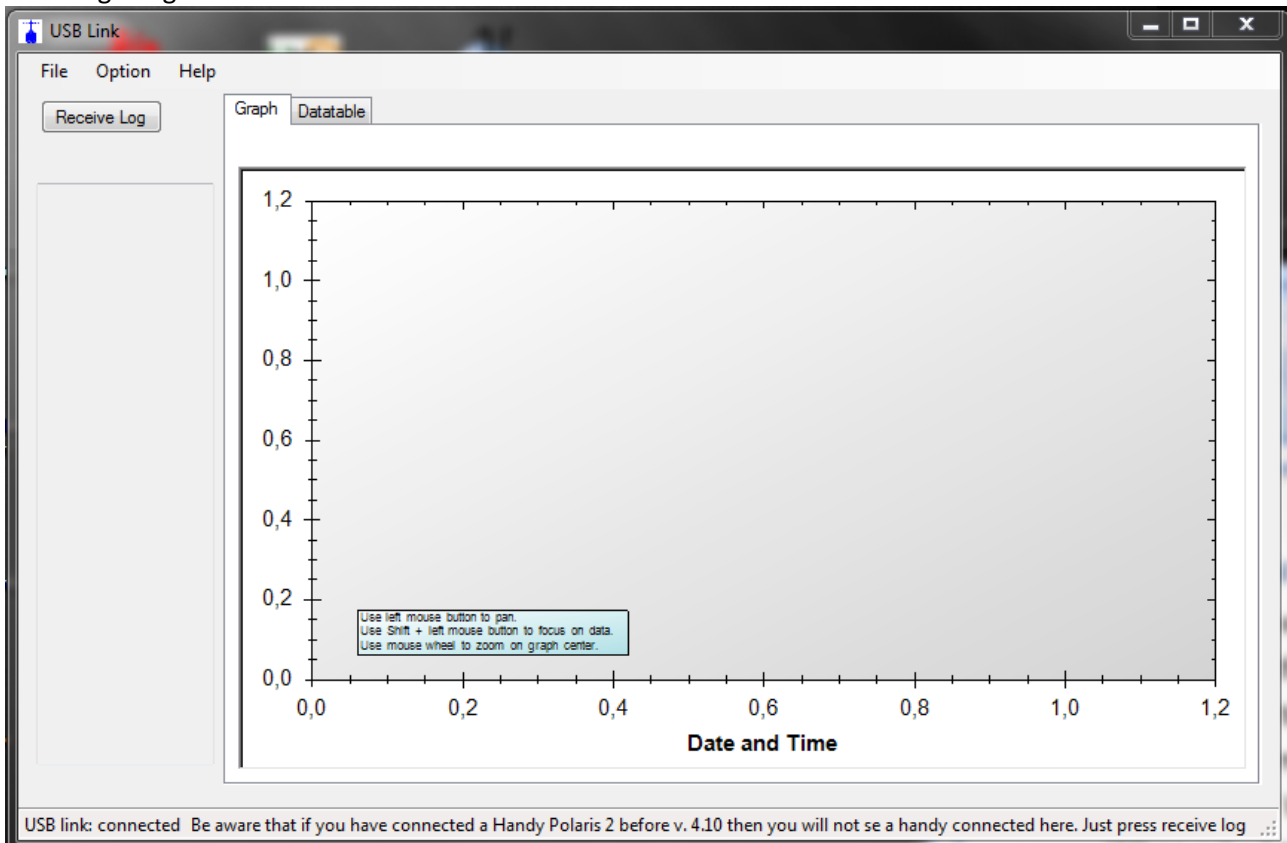


Installing USB Link Software

060219, Installing USB link software 2019

Transfer Log

The procedure to transfer the log is as follows:

- Connect a USB cable between the PC and the USB Link.
- Open the USB Link Software.
- Press "Receive Log" in the USB Link Software. The following window will pop up:

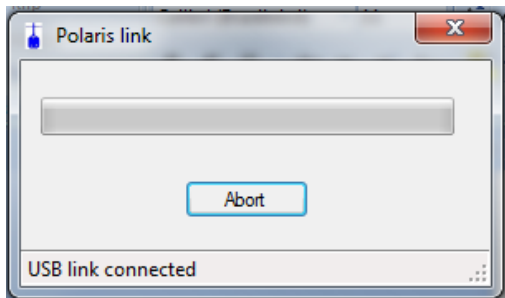

- Connect the USB Link to the Polaris as shown in the picture:



- Press Ok on the Handy and navigate to "Setup" -> "Log Setup" -> "Transfer to PC"

Now the transfer should start.

Afterwards, the pop-up window will close and the software will display a graph with the logged data.